


## R-270

### Auxiliary Heater

#### RV • TRUCKS

The R-270 is a compact heater with two optional "snap-in" outlets so you can direct the air to where you need it.

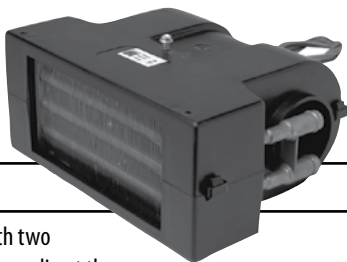

#### R-270 SPECIFICATIONS

<b>BTUs</b>	Heating – 15,000 BTU/Hr @ 100°F air temp. rise (4.4 kW @ 34.8°C)
<b>AIR FLOW</b>	140 CFM (237 m³/h)
<b>WEIGHT</b>	7 lbs. (3 kg)
<b>MOTORS</b>	One 12 VDC (2-speed)
<b>CURRENT</b>	7.7 amps @ 13.6 VDC
<b>DRAW</b>	3.8 amps @ 27.2 VDC
<b>UNITS</b>	R-270-0P (12 VDC) R-270-0-24P (24 VDC)

#### OPTIONS:

##### Snap In Outlets

**Straight 2 ¼" Hose Outlet**  
72R4532



**Louvered Outlet**  
72R3157




##### Installation Kit

RD-1-1654-0P 12VDC

##### Control Panel

71R5819

Heater control -  
Two-speed motor switch with manual  
water valve control

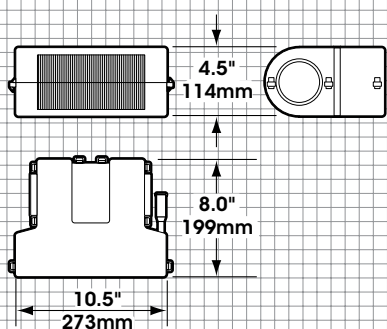

## R-273

### Auxiliary Heater

#### RV • TRUCKS

The R-273 is a compact heater with optional "snap-in" outlet so you can direct the air to where you need it.



#### R-273 SPECIFICATIONS

<b>BTUs</b>	Heating – 14,000 BTU/Hr @ 100°F air temp. rise (4.1 kW @ 34.8°C)
<b>AIR FLOW</b>	129 CFM (220 m³/h)
<b>WEIGHT</b>	3 lbs. (1.35 kg)
<b>MOTORS</b>	One 12 VDC (3-speed)
<b>CURRENT</b>	4.6 amps @ 13.6 VDC
<b>DRAW</b>	2.3 amps @ 27.2 VDC
<b>UNITS</b>	R-273-0P (12 VDC) R-273-0-24P (24 VDC)

#### OPTIONS:

##### Louvers

RD-5-14071-0P



##### Installation Kit

RD-1-1654-0P

